



QCM50 (K1, K3, K5) IO-Link Device Parameter Data Add-On Instruction Guide, v2 5/23/2019

This document covers the installation and use of an Add-On Instruction (AOI) for the Logix Designer software package from Rockwell Automation. This AOI handles acyclic IO-Link commands to and from a QCM50. This AOI has six User Defined Tag data types.

This IO-Link Device Parameter Data AOI is meant to be used alongside a v2 Banner IO-Link Master AOI.

Components

Banner_QCM50_Param_v2.L5X

UDT's Packaged with the AOI

Banner_IOL_Port_v2
Banner_QCM50_Color_Tol
Banner_QCM50_Color_v2
Banner_QCM50_v2
Banner_QCM50_RD_v2
Banner_QCM50_WD_v2

NOTE:

This Banner IO-Link Device Parameter AOI is useless on its own.

It is intended to be linked to a v2 Banner IO-Link Master AOI to function.

Usage

Add and configure the relevant v2 Banner IO-Link Master AOI in your ladder logic program first; then add and configure v2 Banner IO-Link Device Parameter Data AOIs as desired, linking them to the Master AOI.

Other AOIs Available Separately

Banner has AOI files for controlling other Banner IO-Link devices and for a variety of IO-Link Masters. Banner also has AOI files for easily handling Banner device Process Data.

Contents

1. Installation Process..... 1

2. Configuring the AOI 3

3. Linking the Device AOI to the Master AOI 5

4. Using the Paired IO-Link Master and Device Parameter Data AOIs..... 6


Appendix A Command Register 7

Appendix B AOI Resets 10


1. Installation Process

This section describes how to install the AOI in Logix Designer software.



1. Open up a project.
2. In the Controller Organizer window, right-click on the Add-On Instruction folder. Select the Import Add-On Instruction option.

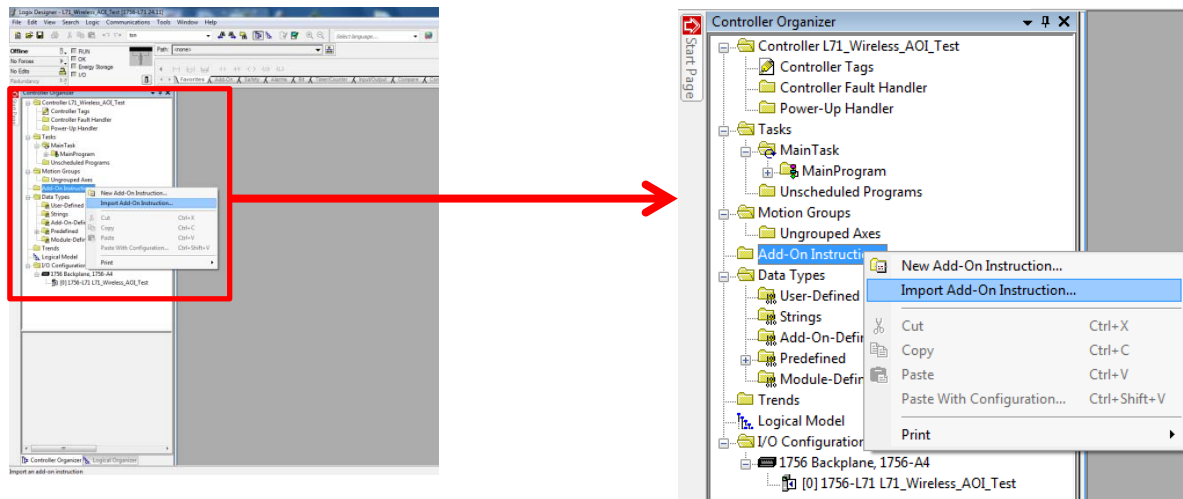

3. Navigate to the correct file location and select the AOI to be installed. In this example the "Banner_QCM50_Param_v2.L5X" file will be selected. Click the Open button.

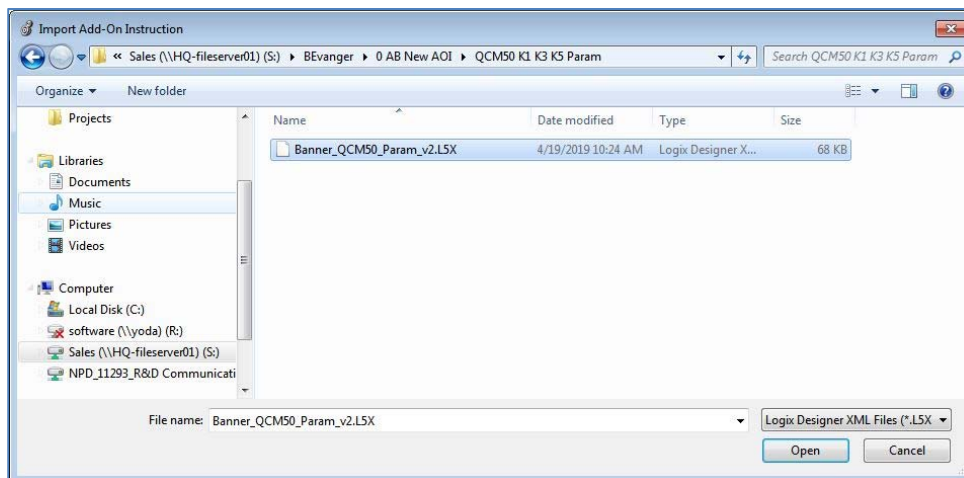

4. The Import Configuration window will pop up. The default selection will create all of the necessary items for the AOI. Click the OK button to complete the import process.

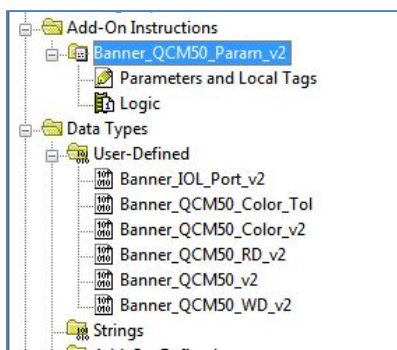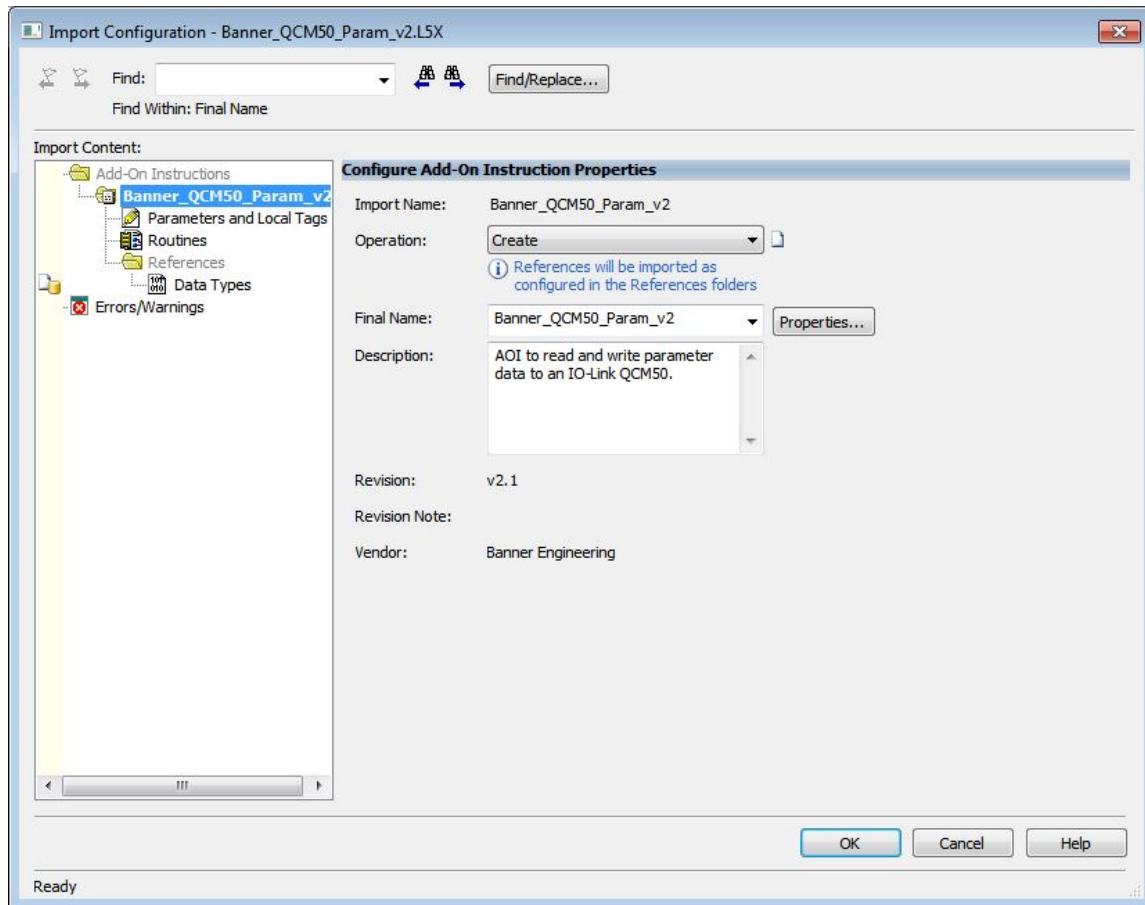

5. The AOI is added to the Controller Organizer window and should look similar to the picture at left.
6. AOI installation into the Logix Designer software complete.


2. Configuring the AOI

Make sure to add and configure a Banner IO-Link Master AOI to your program before adding a Banner IO-Link Device AOI.

- 1. Add the “Banner_QCM50_Param_v2” AOI to your ladder logic program. For each of the question marks shown in the instruction we need to create and link a new tag array. The AOI includes new types of User Defined Tag (UDT): custom arrays of tags meant specifically for this AOI.



- 2. In the AOI, right-click on the question mark on the line labeled “Banner_QCM50_Param_v2”. Click New Tag. In this example, we’ll use the name “QCM50_IOLM2_1_Status”. The example naming convention accounts for this being a QCM50 device connected to IO-Link Master #2, port #1, in our program. More masters could be named IOLM1, IOLM3, and different sensors could be connected at other port numbers, etc.

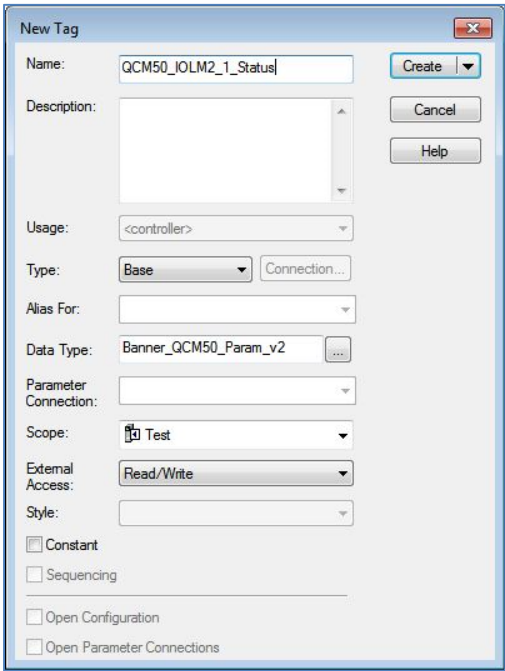

The “EnableIn” and “EnableOut” variables are ladder logic rung status bits automatically added to all AOIs.

| | | | | |
|--------------------------------|---------|---------|---------|-----------------------|
| QCM50_IOLM2_1_Status | { ... } | { ... } | | Banner_QCM50_Param_v2 |
| QCM50_IOLM2_1_Status.EnableIn | 1 | | Decimal | BOOL |
| QCM50_IOLM2_1_Status.EnableOut | 0 | | Decimal | BOOL |
| QCM50_IOLM2_1_Status.Port | 0 | | Decimal | INT |
| QCM50_IOLM2_1_Status.K | 0 | | Decimal | SINT |

3. Now click on the question mark on the line labeled “QCM50”. Click New Tag. In this example, we’ll use the name “QCM50_IOLM2_1”. This array of tags includes the port number to which the QCM50 is connected and the Read and Write data blocks, made up of the information from the IO-Link Index and Subindex values.

New Tag

Name:QCM50_IOLM2_1

Create

Description:

Usage:<controller>

Type:Base

Connection...

Alias For:

Data Type:Banner_QCM50_v2

Parameter Connection:

Scope:Test

External Access:Read/Write

Style:

☐ Constant

☐ Sequencing

☐ Open Configuration

☐ Open Parameter Connections

Cancel


Help

| | | | | |
|-----------------------------------|-------|-------|---------|--------------------|
| QCM50_IOLM2_1 | {...} | {...} | | Banner_QCM50_v2 |
| QCM50_IOLM2_1.Initial_Global_Read | 0 | | Decimal | BOOL |
| QCM50_IOLM2_1.Command | 0 | | Decimal | INT |
| QCM50_IOLM2_1.Read_Data | {...} | {...} | | Banner_QCM50_RD_v2 |
| QCM50_IOLM2_1.Write_Data | {...} | {...} | | Banner_QCM50_WD_v2 |
| QCM50_IOLM2_1.Archive | {...} | {...} | | Banner_QCM50_WD_v2 |
| QCM50_IOLM2_1.Reset | 0 | | Decimal | BOOL |


3. Linking the Device AOI to the Master AOI

The third tag in the QCM50 AOI is meant to be tied into the IO-Link Master AOI.

1. For the “Port_Data” line, choose the relevant IO-Link Master AOI’s “Port_Data” variable. In this example, we choose “IOLM2.Port_Data”.

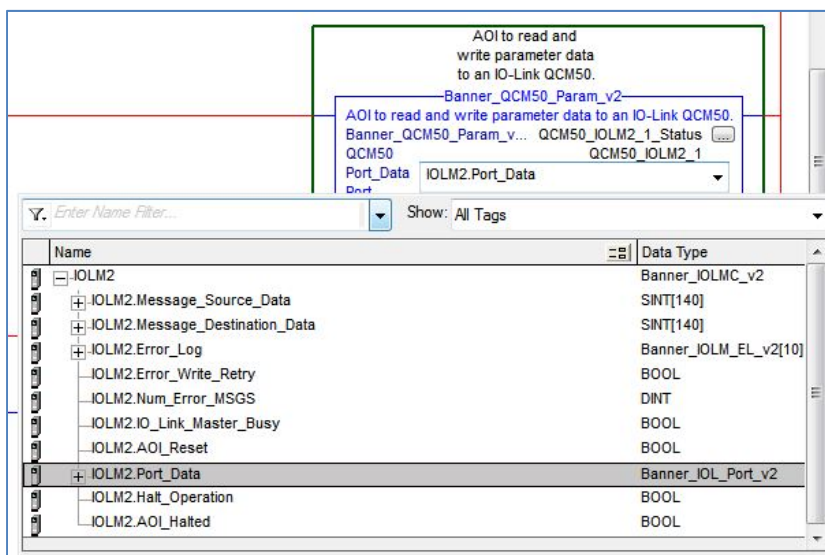

2. For the last two lines of the QCM50 AOI enter two numbers. For “Port”, type in a number equal to the IO-Link Master port number to which the QCM50 is connected. In this example, the QCM50 is on port 1. For the “K” variable, type in a 1, 3, or 5, depending on the specific model of QCM50 used. In this example a QCM50-K3 was used, so a “3” was typed into the “K” location.

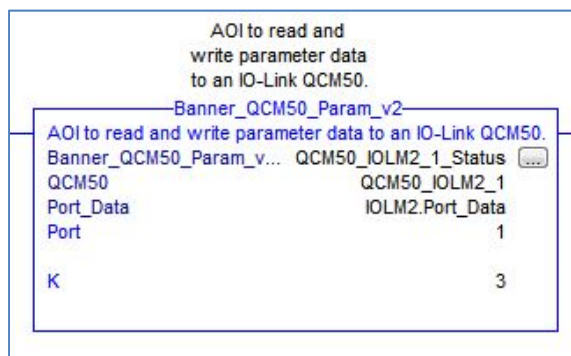

4. Using the Paired IO-Link Master and Device Parameter Data AOIs

The goal is to make the Banner device's IO-Link Index and Subindex values appear in PLC tag arrays as if it were an EtherNet/IP-speaking device. Reading from and writing to the Banner IO-Link device becomes as easy as changing tag values in the PLC. All the complicated work of translating from EtherNet/IP to IO-Link is handled automatically, behind the scenes.

When the program is downloaded to the PLC and the PLC goes into run mode, the IO-Link Master AOI performs a global read for each connected Banner device AOI. The Banner device AOI then creates an archive copy of all writeable parameters for that device. This archive is used to determine whether one of the writeable data tags has been changed. If so, the AOI automatically triggers the process of acyclic writing, using correctly-formatted CIP generic message commands.

There are three methods for acyclic reading of Banner device Index and Subindex values.

1. The initial global read, as requested by the IO-Link Master AOI after the PLC program is downloaded and run.
2. Manually toggling the "Port_Data.Device_Read" bits performs a one-time read of all values from a given Banner device AOI connected to a specific port on the IO-Link Master. To initiate this one-time read, toggle the bit (0-15) in the "Port_Data.Device_Read" variable corresponding to the port number in question. The AOI will read the device parameters from that port once, then turn the bit back to 0 automatically.
3. Manually via the "Command" variable found in every Device Parameter Data AOI. The "Command" register can be used to force one-time read or write actions, as described in Appendix A of any Banner Device Parameter AOI guide.

Acyclic writes to the IO-Link device are handled by simply changing the relevant tag values in the device's "Write_Data" tag array.

Appendix A Command Register

The “Command” register can be used to control the connected IO-Link device ‘by hand’. Placing the correct command numbers into this register is how the AOI achieves its automatic control. The write commands are most useful when an IO-Link device has been physically replaced with a new device of the same type—in this situation executing the “41” command will restore all the PLC saved settings to the new unit.

| | | | | |
|-----------------------------------|-------|-------|---------|--------------------|
| QCM50_IOLM2_1 | {...} | {...} | | Banner_QCM50_v2 |
| QCM50_IOLM2_1.Initial_Global_Read | 0 | | Decimal | BOOL |
| QCM50_IOLM2_1.Command | 0 | | Decimal | INT |
| QCM50_IOLM2_1.Read_Data | {...} | {...} | | Banner_QCM50_RD_v2 |
| QCM50_IOLM2_1.Write_Data | {...} | {...} | | Banner_QCM50_WD_v2 |
| QCM50_IOLM2_1.Archive | {...} | {...} | | Banner_QCM50_WD_v2 |
| QCM50_IOLM2_1.Reset | 0 | | Decimal | BOOL |

The tables below show the command numbers associated with the reading and writing of specific pieces of data. See the QCM50 IODD file or the QCM50 IO-Link Data Reference Guide for more information of the parameters.

Table 1: AOI Command Numbers (Three tables)

| QCM50-K1 Parameter (IO-Link Index #) | Read Command | Write Command |
|--------------------------------------|--------------|---------------|
| Global Read (all) | 1 | |
| Global Write (all) | | 41 |
| Direct Parameters (0) | 2 | |
| Standard Command (2) | | 42 |
| Device Access Locks (12) | 3 | 43 |
| Serial Number (21) | 4 | |
| Temperature (82) | 5 | |
| Operating Data (88) | 6 | |
| Color 1 Setpoint (96) | 8 | 44 |
| Color 1 Tolerances (128) | 20 | 56 |
| Function Q All (176) | 32 | 68 |
| Signal Quality Level (196) | 34 | |
| Teach in Status (204) | 37 | |
| Current Signal Quality (207) | 38 | |
| Input (208) | 39 | 72 |
| Display (224) | 40 | 73 |

| QCM50-K3 Parameter (IO-Link Index #) | Read Command | Write Command |
|---|---------------------|----------------------|
| Global Read (all) | 1 | |
| Global Write (all) | | 41 |
| Direct Parameters (0) | 2 | |
| Standard Command (2) | | 42 |
| Device Access Locks (12) | 3 | 43 |
| Serial Number (21) | 4 | |
| Temperature (82) | 5 | |
| Operating Data (88) | 6 | |
| Color 1 Setpoint (96) | 8 | 44 |
| Color 2 Setpoint (97) | 9 | 45 |
| Color 3 Setpoint (98) | 10 | 46 |
| Color 4 Setpoint (99) | 11 | 47 |
| Color 5 Setpoint (100) | 12 | 48 |
| Color 6 Setpoint (101) | 13 | 49 |
| Color 7 Setpoint (102) | 14 | 50 |
| Color 1 Tolerances (128) | 20 | 56 |
| Color 2 Tolerances (129) | 21 | 57 |
| Color 3 Tolerances (130) | 22 | 58 |
| Color 4 Tolerances (131) | 23 | 59 |
| Color 5 Tolerances (132) | 24 | 60 |
| Color 6 Tolerances (133) | 25 | 61 |
| Color 7 Tolerances (134) | 26 | 62 |
| Function Q All (176) | 32 | 68 |
| Detection Mode (177) | 33 | 69 |
| Signal Quality Level (196) | 34 | 70 |
| Process Data Mapping (202) | 35 | 71 |
| Teach-in Channel (203) | 36 | 72 |
| Teach in Status (204) | 37 | |
| Current Signal Quality (207) | 38 | |
| Display (224) | 40 | 73 |

| QCM50-K5 Parameter (IO-Link Index #) | Read Command | Write Command |
|---|---------------------|----------------------|
| Global Read (all) | 1 | |
| Global Write (all) | | 41 |
| Direct Parameters (0) | 2 | |
| Standard Command (2) | | 42 |
| Device Access Locks (12) | 3 | 43 |
| Serial Number (21) | 4 | |
| Temperature (82) | 5 | |
| Operating Data (88) | 6 | |
| Color 1 Setpoint (96) | 8 | 44 |
| Color 2 Setpoint (97) | 9 | 45 |
| Color 3 Setpoint (98) | 10 | 46 |
| Color 4 Setpoint (99) | 11 | 47 |
| Color 5 Setpoint (100) | 12 | 48 |
| Color 6 Setpoint (101) | 13 | 49 |
| Color 7 Setpoint (102) | 14 | 50 |
| Color 8 Setpoint (103) | 15 | 51 |
| Color 9 Setpoint (104) | 16 | 52 |
| Color 10 Setpoint (105) | 17 | 53 |
| Color 11 Setpoint (106) | 18 | 54 |
| Color 12 Setpoint (107) | 19 | 55 |
| Color 1 Tolerances (128) | 20 | 56 |
| Color 2 Tolerances (129) | 21 | 57 |
| Color 3 Tolerances (130) | 22 | 58 |
| Color 4 Tolerances (131) | 23 | 59 |
| Color 5 Tolerances (132) | 24 | 60 |
| Color 6 Tolerances (133) | 25 | 61 |
| Color 7 Tolerances (134) | 26 | 62 |
| Color 8 Tolerances (135) | 27 | 63 |
| Color 9 Tolerances (136) | 28 | 64 |
| Color 10 Tolerances (137) | 29 | 65 |
| Color 11 Tolerances (138) | 30 | 66 |
| Color 12 Tolerances (139) | 31 | 67 |
| Function Q All (176) | 32 | 68 |
| Detection Mode (177) | 33 | 69 |
| Signal Quality Level (196) | 34 | 70 |
| Process Data Mapping (202) | 35 | 71 |
| Teach-in Channel (203) | 36 | 72 |
| Teach in Status (204) | 37 | |
| Current Signal Quality (207) | 38 | |
| Input (208) | 39 | 72 |
| Display (224) | 40 | 73 |

Appendix B

AOI Resets

From time to time, a reset may be needed for an AOI, particularly if one of the read/write processes the AOI undertakes is interrupted. To this end, each Device Parameter Data AOI and IO-Link Master AOI has a reset bit.

Toggling this bit to a “1” causes the AOI to start over and try again.

| | | | | |
|-----------------------------------|-------|-------|---------|--------------------|
| QCM50_IOLM2_1 | {...} | {...} | | Banner_QCM50_v2 |
| QCM50_IOLM2_1.Initial_Global_Read | 0 | | Decimal | BOOL |
| QCM50_IOLM2_1.Command | 0 | | Decimal | INT |
| QCM50_IOLM2_1.Read_Data | {...} | {...} | | Banner_QCM50_RD_v2 |
| QCM50_IOLM2_1.Write_Data | {...} | {...} | | Banner_QCM50_WD_v2 |
| QCM50_IOLM2_1.Archive | {...} | {...} | | Banner_QCM50_WD_v2 |
| QCM50_IOLM2_1.Reset | 0 | | Decimal | BOOL |

Best practices suggest adding a rung to your ladder logic program that resets all IO-Link Master and Device Parameter AOIs on the first scan. The example below shows one IO-Link Master, called IOLM4, and one connected Q5X having their respective AOIs being reset in this way.

