

## Datasheet

M-GAGE™ MultiHop radios detect the presence or absence of ferrous objects and work as end-point radios within a MultiHop wireless network.



- Internal three-axis magnetoresistive-based technology senses three-dimensional changes to the Earth's magnetic field caused by the presence of ferrous objects
- Designed to minimize the effects of temperature changes and destabilizing magnetic fields
- Sensor learns ambient background and stores settings in non-volatile memory
- Powered by a D-cell lithium battery integrated into the housing
- Functions as an endpoint (slave) radio within a MultiHop wireless network
- Message routing improves link performance
- Sure Cross® architecture creates self-forming and self-healing wireless networks
- Built-in site survey mode enables rapid assessment of a location's RF transmission properties
- Fully potted and sealed housing contains the power source, sensor, and antenna for a completely wireless solution

For additional information, updated documentation, and a list of accessories, refer to Banner Engineering's website, [www.bannerengineering.com](http://www.bannerengineering.com).

Models	Power	Frequency	I/O
<b>DX80DR9M-HMD</b>	D-cell Lithium battery integrated into the housing	900 MHz ISM Band, 100 mW	Internal M-GAGE™
<b>DX80DR2M-HMD</b>		2.4 GHz ISM Band, 65 mW	



### WARNING:

- **Do not use this device for personnel protection**
- Using this device for personnel protection could result in serious injury or death.
- This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A device failure or malfunction can cause either an energized (on) or de-energized (off) output condition.

## MultiHop Configuration Software

Use Banner's MultiHop Configuration Software to view your MultiHop radio network and configure the radio and its I/O.

Figure 1. MultiHop Configuration Software Network and Device Overview screen

Name	Role	Modbus Address	Device Address	Parent Address	Signal Strength	Green	Yellow	Red	Misses	Serial Number	Model Number	Build Date	RF FW Ver	RF EE Ver	LCD FW Ver	LCD EE Ver
Master 900MHz HES	Master	1	23846	23846	0	0	0	0	0	154919	156825	001544	175069	3.6C	175070	1.0
DATA RADIO DEVICE	Slave	35	34520	23846	50	0	50	0	50	100056	000000	000000	165062	3.0E	150491	0.2A
DATA RADIO DEVICE	Slave	17	24200	23846	0	0	0	0	0	155272	151687	001544	169893	3.4	157721	1.1
MultiHop Data Radio	Slave	14	64179	23846	0	0	0	0	0	195251	157568	001233	157719	2.2	157722	1.0
DATA RADIO DEVICE	Slave	45	63129	23846	0	0	0	0	0	259737	151687	001415	169893	2.6	157721	1.1
DATA RADIO DEVICE	Slave	19	24203	23846	0	0	0	0	0	155275	151687	001544	169893	3.4	157721	1.1
DATA RADIO DEVICE	Slave	90	4775	23846	0	0	0	0	0	135847	183420	001523	169893	2.6	157721	1.1
MultiHop Data Radio	Slave	15	64180	23846	0	0	0	0	0	195252	157568	001233	157719	2.2	157722	1.0
DATA RADIO DEVICE	Slave	37	56005	23846	0	0	0	0	0	842437	190055	1541	169345	3.1	169449	0.1C
MultiHop Data Radio	Slave	16	64184	23846	0	0	0	0	0	195256	157568	001233	157719	2.2	157722	1.0
DATA RADIO DEVICE	Slave	20	24196	23846	0	0	0	0	0	155268	151687	001544	169893	3.4	157721	1.1
DATA RADIO DEVICE	Slave	36	56006	23846	0	0	0	0	0	842438	190055	1541	169345	3.1	169449	0.1C
MH MGate SID 13	Slave	13	64176	23846	0	0	0	0	0	195248	157568	001233	157719	2.2	157722	1.0
DATA RADIO DEVICE	Slave	18	24202	23846	0	0	0	0	0	155274	151687	001544	169893	3.4	157721	1.1
DATA RADIO DEVICE	Slave	27	9819	23846	0	0	0	0	0	271963	151687	001425	169893	2.6	157721	1.1
MultiHop Radio H12	Repeater	91	58281	23846	78	70	8	0	22	123817	151685	1512	148691	2.2	151698	1.3
DATA RADIO DEVICE	Slave	84	4784	58281	0	0	0	0	0	135656	183420	001523	169893	2.6	157721	1.1
DATA RADIO DEVICE	Slave	32	9821	58281	0	0	0	0	0	271965	151687	001425	169893	2.6	157721	1.1
MH MGate SID 12	Slave	12	64185	58281	0	0	0	0	0	195257	157568	001233	157719	2.2	157722	1.0
MultiHop Data Radio	Slave	78	29005	58281	0	0	0	0	0				169893	2.6	157722	1.1
DATA RADIO DEVICE	Slave	31	65198	58281	0	0	0	0	0	261806	151687	001417	169893	2.6	157721	1.1
DATA RADIO DEVICE	Slave	82	4784	58281	0	0	0	0	0	135616	183420	001523	169893	2.6	157721	1.1
MH MGate SID 11	Slave	11	64181	58281	0	0	0	0	0	195253	157568	001233	157719	2.2	157722	1.0
DATA RADIO DEVICE	Slave	83	4743	58281	0	0	0	0	0	135815	183420	001523	169893	2.6	157721	1.1

The software connects to a MultiHop master radio using one of four methods.

- Serial; using a USB to RS-485 (for RS-485 radios) or a USB to RS-232 (for RS-232 radios) converter cable.
- Modbus TCP; using an Ethernet connection to an Ethernet radio master.
- Serial DXM; using a USB cable to a DXM Controller to access a MultiHop master radio.



- TCP DXM: using an Ethernet connection to a DXM Controller to access a MultiHop master radio.

For MultiHop DX80DR9\* models, Banner recommends using **BWA-UCT-900**, an RS-485 to USB adapter cable with a wall plug that can power your 900 MHz 1 Watt MultiHop radio while you configure it. The adapter cable is not required when connecting to a DXM Controller.

Download the most recent software revision from the Wireless Reference Library on Banner Engineering's website: [www.bannerengineering.com](http://www.bannerengineering.com).

## M-GAGE Overview


The M-GAGE™ sensor uses a passive sensing technology to detect large ferrous objects. The sensor measures the change in the Earth's natural magnetic field (ambient magnetic field) caused by the introduction of a ferromagnetic object.

The M-GAGE provides a direct replacement for inductive loop systems and needs no external frequency box. Its unique design allows quick installation within a core hole. For best performance, mount the sensor below-grade, in the center of the traffic lane.

Because the M-GAGE uses an internal battery, the device ships from the factory in a "deep sleep" mode. While in "deep sleep" mode, the M-GAGE does not attempt to transmit to a parent radio and remains in deep sleep until an LED light at the receiving window wakes it up. To wake the device:

1. Point the optical commissioning device at the receiver.
2. Click and hold the button until the red/green LED in the center of the M-GAGE lights up, about five seconds.

When the device wakes up, the LEDs flash according to the LED table. To return the M-GAGE back to its "deep sleep" mode, click and hold the button until the red LED in the center of the M-GAGE stops blinking, about five seconds.

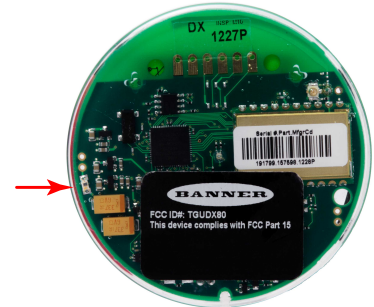

The sensor uses three mutually perpendicular magnetoresistive transducers, with each transducer detecting magnetic field changes along one axis. Incorporating three sensing elements produces maximum sensor sensitivity. A ferrous object alters the local (ambient) magnetic field surrounding the object, as shown. The magnitude of this magnetic field change depends both on the object (size, shape, orientation, and composition) and on the ambient magnetic field strength and orientation. During a simple programming procedure, the M-GAGE sensor measures the ambient magnetic field. When a large ferrous object alters that magnetic field, the sensor detects the magnetic field changes (anomalies). When the degree of magnetic field change reaches the sensor's threshold, the device reports a change of state.

Figure 2. Field A: Baseline magnetic field with slight disturbances caused by permanent ferrous-metal objects within or near the sensor.


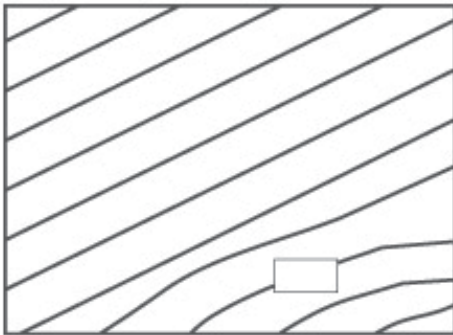


Figure 3. Field B: After a large object is introduced, the magnetic field changes. The sensor detects the changes in the field's strength and orientation between the ambient field and Field B. If the differential is greater than the sensitivity threshold, the device reports a change of state.

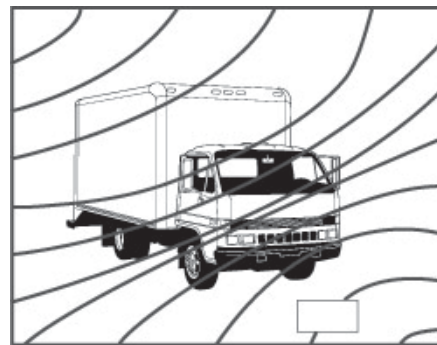

The sensor range depends upon three variables:

- The local magnetic environment (including nearby ferrous material)
- The magnetic properties of the object to be sensed
- Sensor settings

The sensor detects changes in the ambient magnetic field in all directions. As with other sensors, the range depends upon the target. The strong disturbance of a large ferrous object decreases as distance from the sensor increases; the magnitude and shape of the disturbance depends upon the object's shape and content. The sensor can be programmed to react to magnetic field disturbances of greater or lesser intensity, using three adjustments: baseline, threshold, and hysteresis.



**Note:** The sensor continues to sense a vehicle in its sensing field even when the vehicle is stopped.

## Setting Up Your MultiHop M-GAGE Network

To set up and install your wireless MultiHop M-GAGE network, follow these steps.

For complete information, including binding, configuring, installing, weatherproofing, device menu maps, troubleshooting, and a list of accessories, refer to the MultiHop Radio Product Manual (p/n 151317) or the MultiHop Register Guide (p/n 155289)

1. Use the LED light to wake up the M-GAGE radios.
2. Form the wireless network by binding the M-GAGE radios to their master radio.
3. Observe the LED behavior to verify the devices are communicating with each other.
4. Conduct a site survey between the MultiHop Radios.
5. Install your M-GAGE radios.

### Using the LED Light

The LED flashlight is used to set device modes, such as entering binding mode.



**Click and Hold.** Click and hold the LED light at the receiving window to wake a wireless device from "deep sleep." If your device is not in "deep sleep," clicking and holding the LED light will put it into "deep sleep." While in "deep sleep" mode, the device does not attempt to transmit to a parent radio and remains in deep sleep until an LED light at the receiving window wakes it up.

**Three clicks.** Triple clicking at the receiving window puts the device into binding mode. The device binds to the Device ID the master radio is set to. Before putting the device into binding mode, verify the master radio's rotary dials are set to ensure the device will be binding to the correct device ID.

If the device is in binding mode, double click the LED light to exit binding mode.


Model Number: BWA-MGFOB-001

### Bind the MultiHop M-GAGE to Form a Network

Before using the M-GAGE devices, you must bind them to the MultiHop master radio and assign a device ID using the master's rotary dials. There are no physical switches or dials on the M-GAGE radio. To bind and address an M-GAGE, follow these steps.

Binding MultiHop radios ensures all MultiHop radios within a network only communicate with other radios within the same network. The MultiHop master radio automatically generates a unique binding code when the master radio enters binding mode. This code is then transmitted to all MultiHop radios within range that are also in binding mode. After a MultiHop M-GAGE slave is bound, the M-GAGE radio accepts data only from the master to which it is bound. The binding code defines the network, and all radios within a single network must use the same binding code.

1. On the MultiHop master radio: Apply power to the master radio.
2. Triple-click button 2 to enter binding mode.  
For the two LED/button models, both LEDs flash red and the LCD shows \*BINDNG and \*MASTER. For single LED/button models, the LED flashes alternatively red and green.
3. Using the rotary dials, select the Device ID to assign to the M-GAGE.  
Use the left rotary dial for the left digit and the right rotary dial for the right digit. For example, to assign your M-GAGE to Device ID 10, set the left dial to 1 and the right dial to 0.
4. On the MultiHop M-GAGE radio: Place the optical commissioning device in contact with the clear plastic housing and pointed directly at the configuration port indicated by the label.

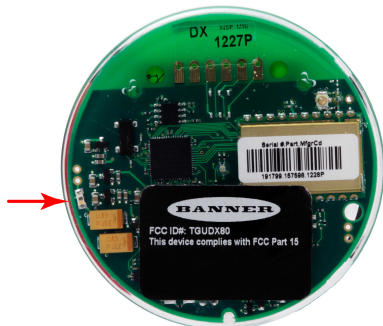

5. Click the button on the optical commissioning device three times to place the M-GAGE into binding mode. (If the M-GAGE is in its "slow scan" mode, this will wake up the M-GAGE as well as begin binding mode.)  
After entering binding mode, the M-GAGE LEDs blink slowly, alternating between red and green. After the M-GAGE receives a valid binding code from the MultiHop Master Radio, the red and green LEDs are both illuminated continuously, resulting in a slightly orange light. The red and green LEDs simultaneously flash four times to indicate that the M-GAGE accepts the binding code. The M-GAGE enters RUN mode. Note: If the M-GAGE is in binding mode and the user does not

- accept the binding code with a triple click from the optical commissioning device, the M-GAGE automatically exits binding mode after one hour and returns to the previous binding code.
6. Write the Device ID on the M-GAGE's label.
  7. Repeat this sequence (steps 3 through 6) for as many M-GAGES as you need to bind.  
If two M-GAGES are accidentally assigned the same Device ID, rerun the binding procedure on one of the M-GAGES to reassign the ID. The binding sequence may be run on a M-GAGE as many times as necessary.
  8. On the MultiHop master radio: Double-click button 2 to exit binding mode.  
The master radio reboots and enters RUN mode.

## M-GAGE Installation

Figure 4. M-GAGE Reading when installed 1 meter above the ground.



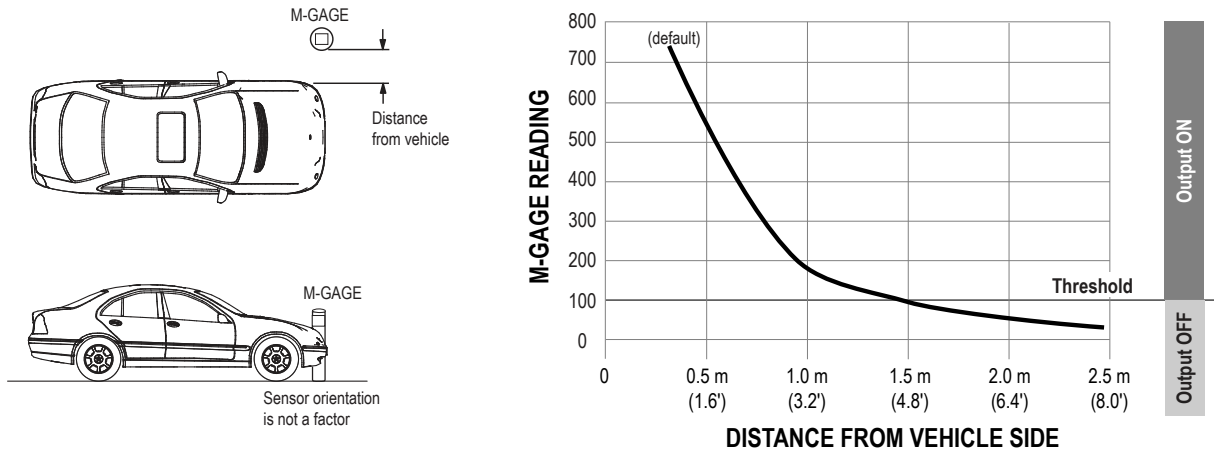


Figure 5. M-GAGE Reading when installed underground.

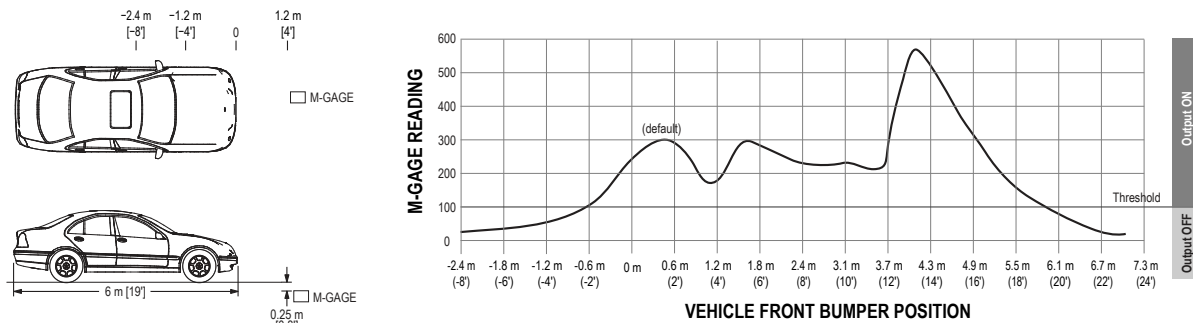


## Placing the M-GAGE

Figure 6. Optimum placement of M-GAGE for traffic detection

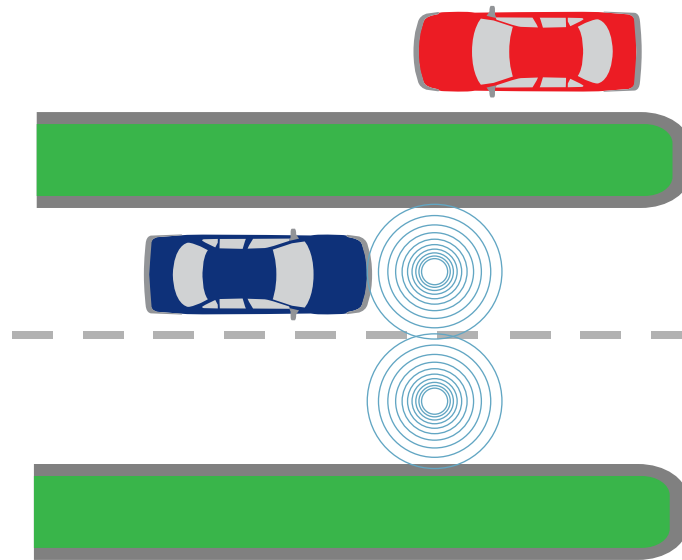

When the sensor is positioned in the middle of the traffic lane, it can be configured to a threshold level to detect vehicles only in the lane of interest. This is known as lane separation, or not detecting a vehicle in an adjacent lane. A threshold level also aids the sensor in vehicle separation – detecting a break between the back bumper of a leading vehicle and the front bumper of the next vehicle. With proper placement and configuration, the M-GAGE can achieve vehicle separation with distances of 24 inches or less.

Figure 7. Poor placement of M-GAGE for traffic detection

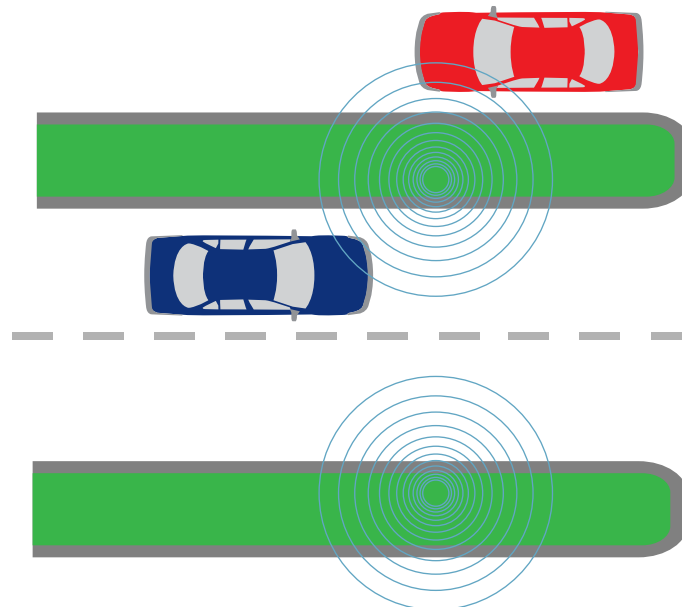

Although mounting the sensor at the side of a lane may be successful, this mounting location increases the potential for problems. To reliably detect a vehicle from the side, the sensor threshold must be increased to see objects farther away in the lane of interest. Unfortunately, this enables the sensor to also detect lawn mowers in the median or vehicles in adjacent lanes, causing false counts. Place the M-GAGE sensor at the edge of a traffic lane only if there is no possibility of the sensor detecting other objects. To avoid detecting other objects, ensure no vehicles will be within 10 feet of the sensor on the non-traffic side.

### Buried Installation

- Always wear proper eye protection when grinding or drilling.
- Gloves, hearing protection, and sturdy boots are highly recommended.
- Always read and follow all specific instructions and safety precautions provided by the manufacturer of all equipment.


Required equipment includes:

- 3" Coring equipment. Many options exist; choose what works best for the conditions of your installation site.


- Sealer. We recommend using a flexible, weather-proof liquid asphalt/concrete repair compound suitable for your needs. Banner Engineering used Fabick Protective Coatings joint sealers for test installations.

The installation objective is to fully encapsulate the M-GAGE sensor in sealant.


1. Bind and configure all devices before continuing.
2. Drill a 3 inch diameter hole to a depth of about 3 inches. Use a chisel to break off the plug of material and remove any loose material remaining in the bottom of the hole.

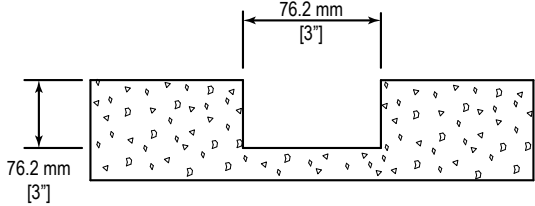

3. Verify all surfaces inside and near the hole are free of debris, warm (consult sealer manufacturer data for temperature threshold data), and thoroughly dry.
4. Repeat steps 1 through 3 for all locations.
5. One hole at a time, pour enough sealer into the hole to halfway fill the hole.

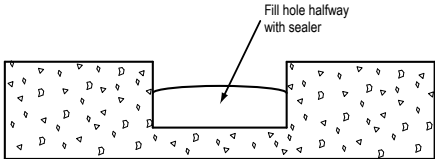

6. Battery side up, place the M-GAGE into the hole and press down until the sealer material flows up and around the M-GAGE and begins to pour onto the top. The top of the M-GAGE should be about 1.5 inches below the surface.
7. Immediately fill the spaces surrounding the device with sealer. Completely fill the hole with sealer to avoid leaving a recess that collects water and dirt.

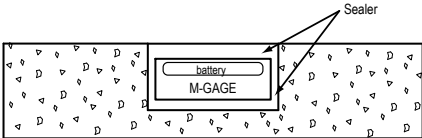

Modbus M-GAGE Input Register Table

Register (4xxx)	Input #	I/O Type	Holding Register Representation	
			Min. (Dec.)	Max. (Dec.)
1	1	M-GAGE	0	65535
2	2			
3	3			

Modbus Addressing Convention

All Modbus addresses refer to Modbus holding registers. When writing your own Modbus scripts, use the appropriate commands for interfacing to holding registers. Parameter description headings refer to addresses in the range of 40000 as is customary with Modbus convention.

## Modbus Register Configuration (M-GAGE)

The factory default settings for the inputs and device operations can be changed by the user through the device Modbus registers. To change parameters, the data radio network must be set to Modbus mode and the data radio must be assigned a valid Modbus slave ID. The following sections provide the basic parameter descriptions and register locations. For a complete Modbus register map, refer to the MultiHop Radio Product Manual, Banner p/n 151317.

I/O Parameter Section	Groups	4xxxx Registers	Parameters
Input	Input 1	1001–1003	1x1 Enable 1x2 Sample Interval (high word) 1x3 Sample Interval (low word)

## Factory Default Settings for M-GAGE Inputs

Register	M-GAGE Parameter	Default Value (dec)	Register	M-GAGE Parameter	Default Value (dec)
x1001	Enable	1	x4506	Sample High	6
x1002	Sample Interval (High Word)	00	x4507	Sample Low	6
x1003	Sample Interval (Low Word)	13	x4509	Delta	0
x4501	Set Baseline	0	x4510	Threshold	150
x4502	Disable Axes	0	x4511	Hysteresis	40
x4503	Disable Compensation Median Filter	0	x4512	Baseline (Drift) Filter Time	20
x4504	Disable Sensing Median Filter	0	x4513	Baseline (Drift) Filter Threshold	30
x4505	Low Pass Filter	3	x4514	Baseline (Drift) Filter Tau	12

## Specifications

### Radio Range<sup>1</sup>

900 MHz: 300 m (1000 ft)  
2.4 GHz: 150 m (500 ft)

### Radio Transmit Power

900 MHz, 100 mW: 20 dBm (100 mW) conducted  
2.4 GHz, 65 mW: 18 dBm (65 mW) conducted, less than or equal to 20 dBm (100 mW) EIRP

### 900 MHz Compliance

FCC ID TGUDX80: FCC Part 15, Subpart C, 15.247  
IC: 7044A-DX8009

### 2.4 GHz Compliance (MultiHop)

FCC ID UE300DX80-2400: FCC Part 15, Subpart C, 15.247  
Radio Equipment Directive (RED) 2014/53/EU  
IC: 7044A-DX8024

ANATEL: 15966-21-04042 Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL [www.gov.br/anatel/pt-br](http://www.gov.br/anatel/pt-br)

### Operating Conditions

–40 °C to +85 °C (–40 °F to +185 °F)  
95% maximum relative humidity (non-condensing)

### Environmental Rating

IEC IP67; NEMA 6

### Certifications



**Banner Engineering**  
Europe Park Lane,  
Culliganlaan 2F bus 3,  
1831 Diegem, BELGIUM

(CE approval only  
applies to 2.4  
GHz models)

### Supply Voltage

Lithium battery (D cell) integrated into the housing, 19.2 Ah  
Battery life: Up to 10 years  
Battery life is dependent upon installation, radio frequency (RF) signal quality, the number of RF transmissions, and environmental conditions.

### Housing

ABS  
Weight: 0.24 kg (0.55 lbs)

### Interface

One bi-color LED indicator

### Spread Spectrum Technology

FHSS (Frequency Hopping Spread Spectrum)

### M-GAGE Inputs (MultiHop Models)

Input: Internal Magnetometer  
Sample Rate: 1 second  
Ambient Temperature Effect: Less than 0.5 milligauss/°C  
Sensing Range: See figures on previous pages

### Radiated Immunity HF

10 V/m (EN 61000-4-3)

### Shock and Vibration

All models meet IEC 60068-2-6 and IEC 60068-2-27 testing criteria  
Shock: 30G 11 ms duration, half sine wave per IEC 60068-2-27  
Vibration: 10 Hz to 55 Hz, 0.5 mm peak-to-peak amplitude per IEC 60068-2-6

<sup>1</sup> Radio range depends on the environment and line of sight and is lower when buried.

## Banner Engineering Corp. Limited Warranty

---

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

**THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.**

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to:

[www.bannerengineering.com](http://www.bannerengineering.com).

For patent information, see [www.bannerengineering.com/patents](http://www.bannerengineering.com/patents).

## Exporting Sure Cross® Radios

**Exporting Sure Cross® Radios.** It is our intent to fully comply with all national and regional regulations regarding radio frequency emissions. **Customers who want to re-export this product to a country other than that to which it was sold must ensure the device is approved in the destination country.** The Sure Cross wireless products were certified for use in these countries using the antenna that ships with the product. When using other antennas, verify you are not exceeding the transmit power levels allowed by local governing agencies. This device has been designed to operate with the antennas listed on Banner Engineering's website and having a maximum gain of 9 dBm. Antennas not included in this list or having a gain greater than 9 dBm are strictly prohibited for use with this device. The required antenna impedance is 50 ohms. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen such that the equivalent isotropically radiated power (EIRP) is not more than that permitted for successful communication. Consult with Banner Engineering Corp. if the destination country is not on this list.

## ANATEL

Modelo (Model): DX80-2400—Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL [www.gov.br/anatel/pt-br/](http://www.gov.br/anatel/pt-br/)



ANATEL: 15966-21-04042



more sensors, more solutions